


A'pex Integration Inc.

Turbo Timer Hard Wiring Instructions


To hardwire the Turbo Timer follow these wiring instructions:

Red: 12v+ constant
 Black: 12v- ground
 Green: IG1 output
 Blue: IG2 output
 Grey: Handbrake switch

Example 1: Some cars require 2 wires to be energized when the key is in the "ON" position.

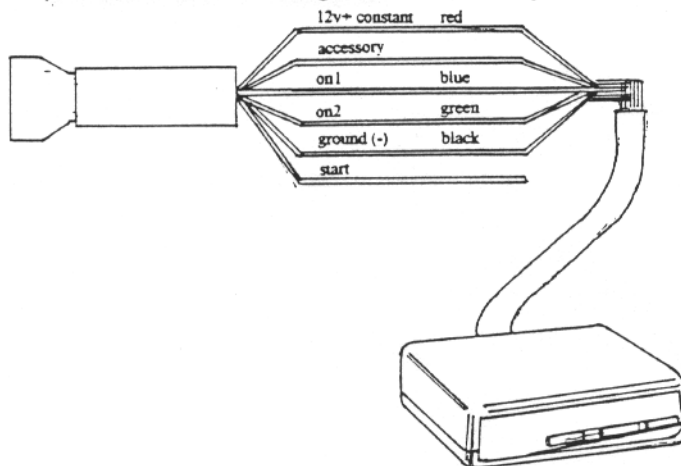

Example 2: Some cars require 1 wire to be energized when the key is in the "ON" position. The other wire will go to a wire normally energized in the "ACC" position.

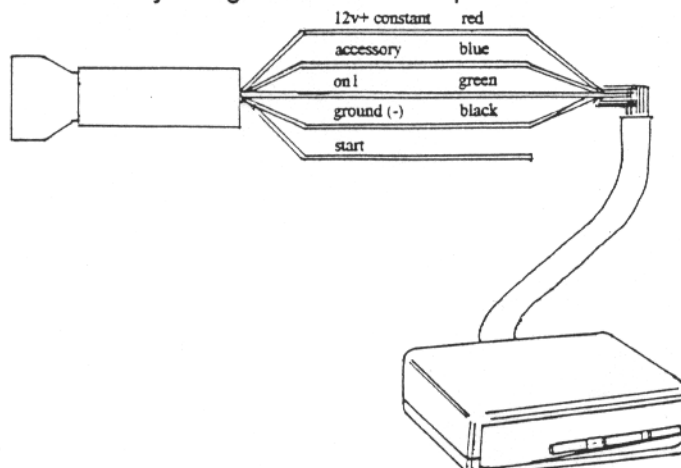

Note: The handbrake wire does not necessarily need to be used.